


FIT PRINT

OPTION

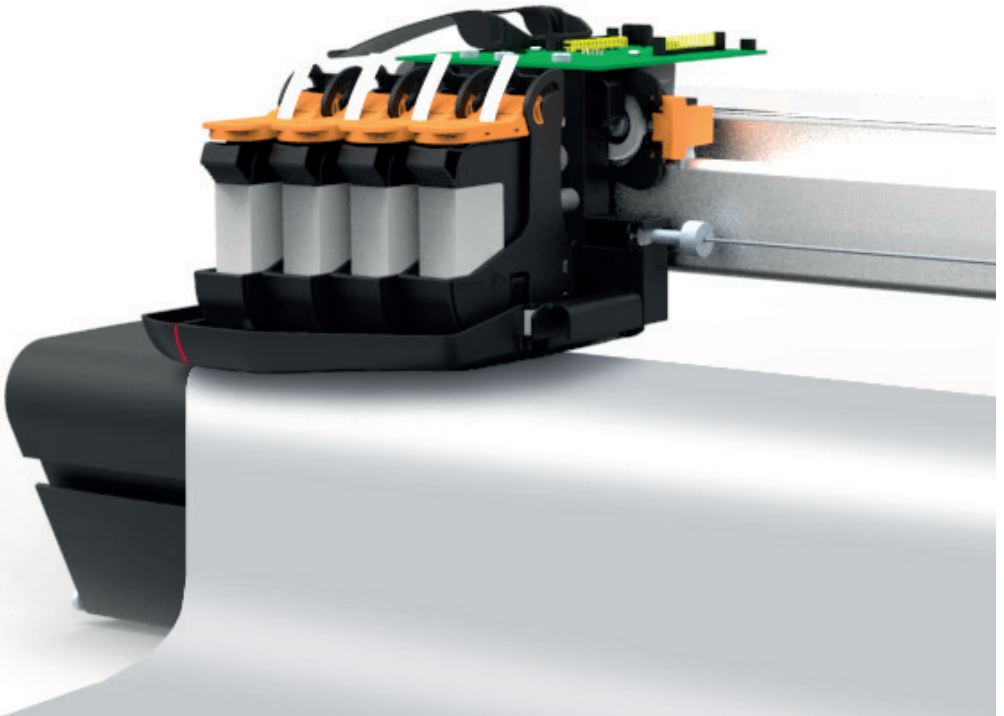

**INSTALLATION & OPERATION
GUIDE**



INDEX

Description	5
Box contents	6
Previous requirements	7
Option card	8
Option installation	10
Verifying Option installation on Plotter	11
Verifying Option installation on Software	12
Operation	13
Technical Service	14
Notes	15




DESCRIPTION

With this option the plotter will automatically detect the paper origin and paper end. There's no need to recalibrate the print margin every time the paper is changed.


Stop printing out of the paper, and start printing easily in the desired alignment (right, center, left) without any effort.

BOX CONTENT

Check the boxes to verify that all parts are present.

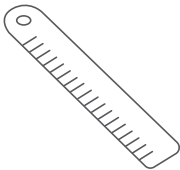

x1
Ruler

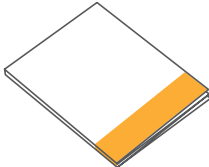

x1 - Installation & Operation guide



x1 - Activation
card



PREVIOUS REQUIREMENTS

- Verify that the plotter firmware version is higher than 6.0.0.0.

To find out your plotter's firmware version, go to:

Menu > Options > Info> Firmware versions

OPTION CARD




TDOT


POWERFULLY REIMAGINED




OPTION INSTALLATION

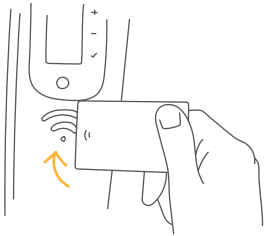

01. Get the option card and pass it through the RFID zone (on the right side panel) for at least 2 seconds, until you hear the acoustic signal.

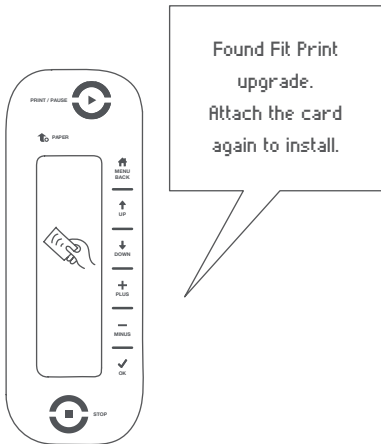


02. Check the verification message installation in the display.

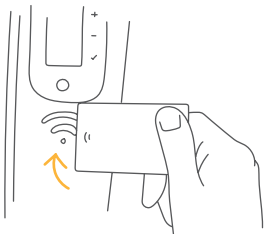

03. Pass again the card to validate the installation, until you hear the acoustic signal.

VERIFYING OPTION INSTALLATION ON PLOTTER

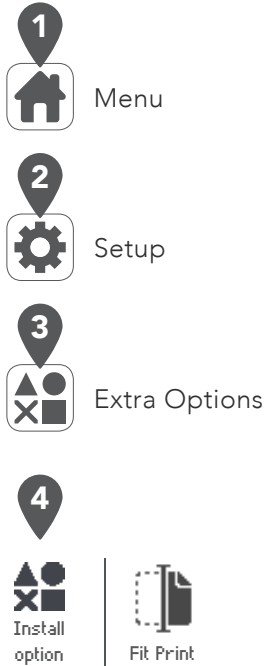

On the operator panel keyboard press the Menu button. (1)

Select the Setup menu (2) and press **Ok**.


Select the Extra Options menu (3) and press **Ok**.

Check the installation of the **Fit Print** option. (4)

Press the Menu button to get back.



VERIFYING OPTION INSTALLATION ON SOFTWARE

In the main User Manager screen select “Customer Programs” (1) and select “Plug-ins and Options” (2). Check that the **Fit Print** option is correctly installed (3). Press Accept to exit.

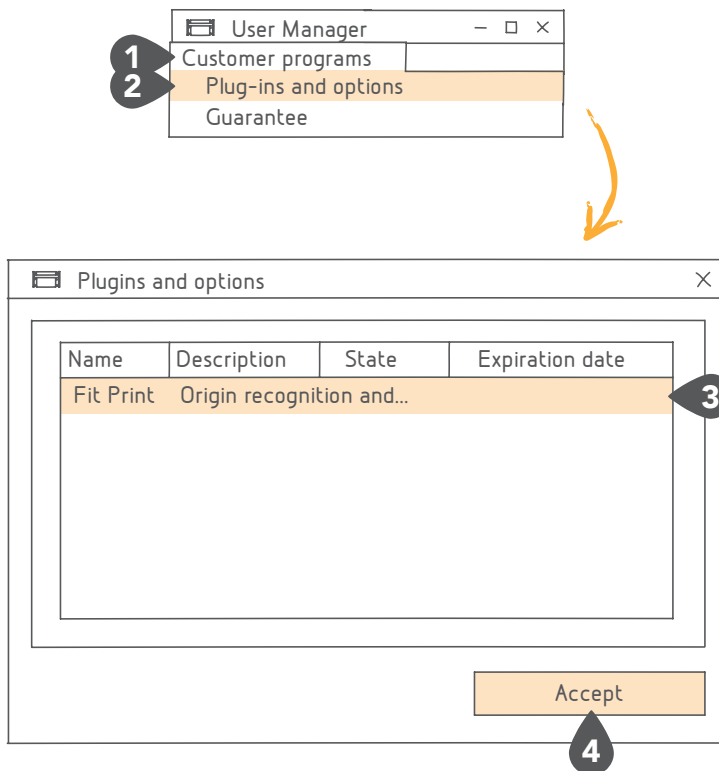

- * To verify the installation using the lan connection, the server must be configured previously.

OPERATION

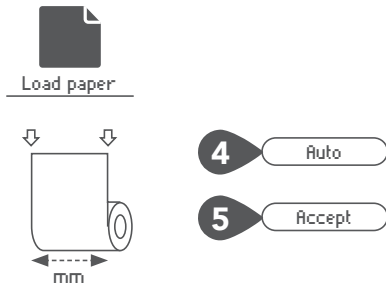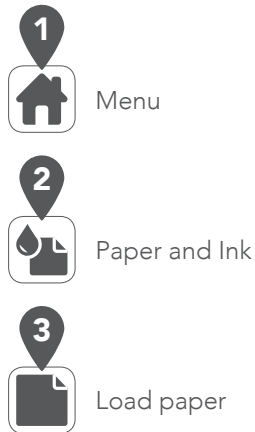

On the plotter Operator Panel Keyboard, press Menu button (1).

Select Paper and Ink menu (2) and press Ok.

Select Load Paper menu (3) select Auto (4) and press Ok to activate automatic measure.

The plotter will detect and show the **Paper width**.

Press Accept (5) to exit.

TECHNICAL SERVICE

Please contact your dealer for technical support in case of any issue.

204448_190701